

§ 35.35–50

§ 35.35–50 Termination of transfer operations—TB/ALL.

(a) When transfer operations are completed the valves on cargo connections on the vessel shall be closed. The cargo connections shall be drained of cargo.

(b) [Reserved]

§ 35.35–55 Transfer of other cargo or stores on tank vessels—TB/ALL.

(a) No packaged goods, freight, or ship's stores may be loaded or unloaded during the loading or unloading of cargo of Grade A, B, or C except by permission of the person in charge of the transfer of liquid cargo in bulk. No explosives may be loaded, unloaded, or carried as cargo on any tank vessel containing cargo of Grade A, B, or C.

(b) Where package and general cargo is carried directly over bulk cargo tanks, it shall be properly dunnaged to prevent chafing of metal parts and securely lashed or stowed.

[CGFR 65–50, 30 FR 16704, Dec. 30, 1965, as amended by CGD 79–116, 60 FR 17157, Apr. 4, 1995]

§ 35.35–60 Transportation of other cargo or stores on tank barges—B/ALL.

(a) Tank barges may be permitted to transport deck cargoes directly over bulk cargo spaces when the nature of such deck cargoes and the methods of loading and unloading same do not create an undue hazard. Such tank barges shall have their decks properly dunnaged to prevent chafing between the steel parts of the vessel and the deck cargo.

(b) [Reserved]

§ 35.35–70 Maintenance of cargo handling equipment—TB/ALL.

The cargo handling equipment shall be maintained by the tank vessel's personnel in accordance with the regulations in this subchapter, including the following:

(a) Cargo hose shall not be used in transfer operations in which the pressures are such that leakage of cargo occurs through the body of the hose.

(b) Cargo pump relief valves shall be tested at least once each year to determine that they function satisfactorily

46 CFR Ch. I (10–1–13 Edition)

at the pressure at which they are set to open.

(c) Cargo pump pressure gage shall be tested at least once a year for accuracy.

(d) The cargo discharge piping of all tank vessels shall be tested at least once each year for tightness, at the maximum working pressure.

§ 35.35–75 Emergencies—TB/ALL.

In case of emergencies nothing in the regulations in this subchapter shall be construed as preventing the senior officer present from pursuing the most effective action in his judgment for rectifying the conditions causing the emergency.

§ 35.35–85 Air compressors—TB/ALL.

No person may operate, install, or re-install an air compressor in a cargo area described in § 32.35–15 of this subchapter.

[CGD 95–028, 62 FR 51200, Sept. 30, 1997]

Subpart 35.40—Posting and Marking Requirements—TB/ALL

§ 35.40–1 General alarm contact maker—TB/ALL.

Each general alarm contact maker must be marked in accordance with requirements in subchapter J (Electrical Engineering Regulations) of this chapter.

[CGD 74–125A, 47 FR 15231, Apr. 8, 1982]

§ 35.40–5 General alarm bells—TB/ALL.

General alarm bells must be marked in accordance with requirements in subchapter J (Electrical Engineering Regulations) of this chapter.

[CGD 74–125A, 47 FR 15231, Apr. 8, 1982]

§ 35.40–6 Emergency lights—TB/ALL.

Emergency lights must be marked in accordance with requirements in subchapter J (Electrical Engineering Regulations) of this chapter.

[CGD 74–125A, 47 FR 15231, Apr. 8, 1982]

§ 35.40–7 Carbon dioxide and clean agent alarms—T/ALL.

Each carbon dioxide or clean agent fire extinguishing alarm installed after